

 
ELECTRONIC CASH REGISTER

# 200CR

OPERATOR'S INSTRUCTION MANUAL



## Unpacking the register

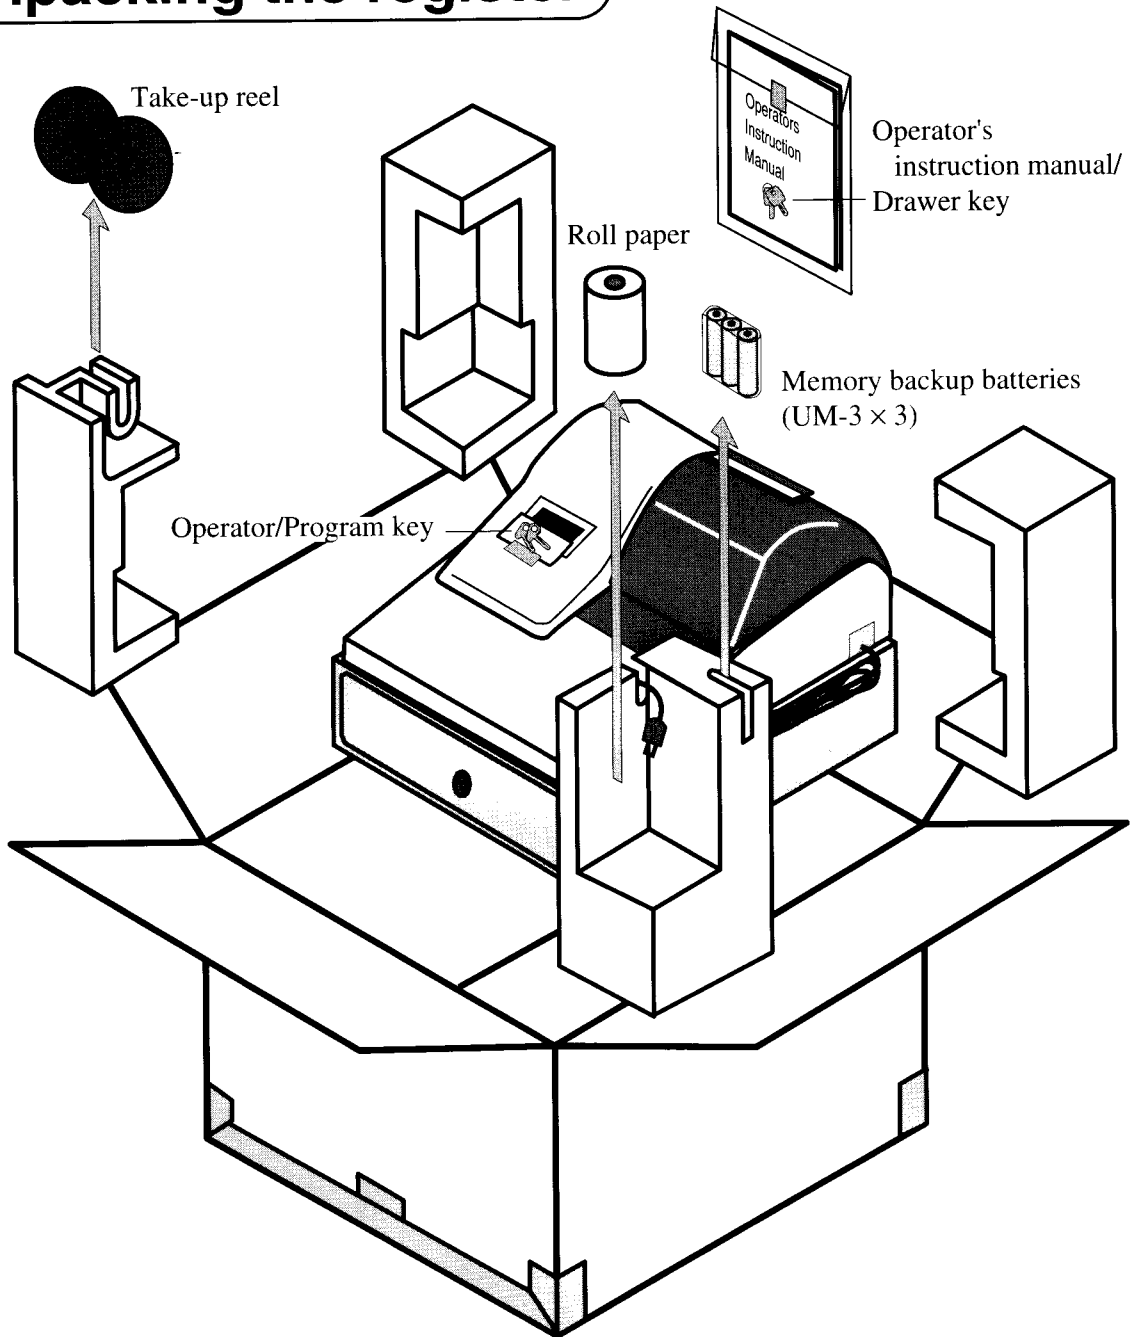

### Welcome to the CASIO 200CR!

Congratulations upon your selection of a CASIO Electronic Cash Register, which is designed to provide years of reliable operation.

Operation of a CASIO cash register is simple enough to be mastered without special training. Everything you need to know is included in this manual, so keep it on hand for reference.

 
 
Consult your CASIO dealer if you have any questions about points not specifically covered in this manual.

The main plug on this equipment must be used to disconnect mains power.  
Please ensure that the socket outlet is installed near the equipment and shall be easily accessible.

## Important!



Before you do anything, be sure to note the following important precautions!

Do not locate the cash register where it will be subjected to direct sunlight, high humidity, splashing with water or other liquids, or high temperature (such as near a heater).

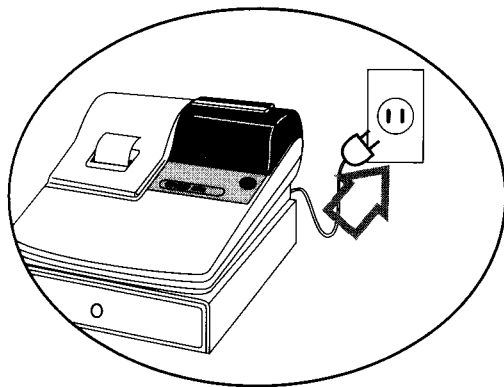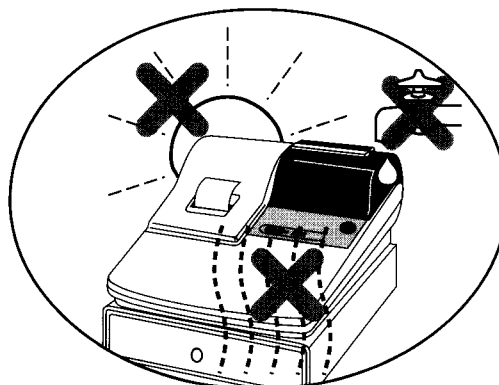


Be sure to check the sticker on the side of the cash register to make sure that its voltage matches that of the power supply in the area.

  Never operate the cash register while your hands are wet.

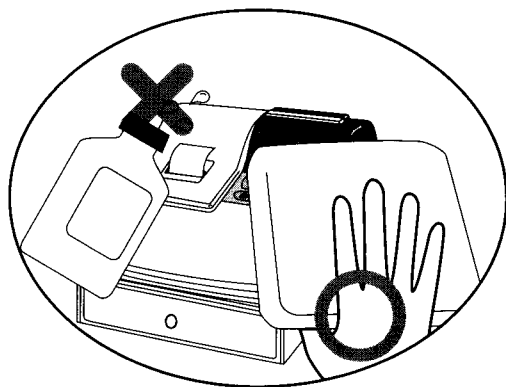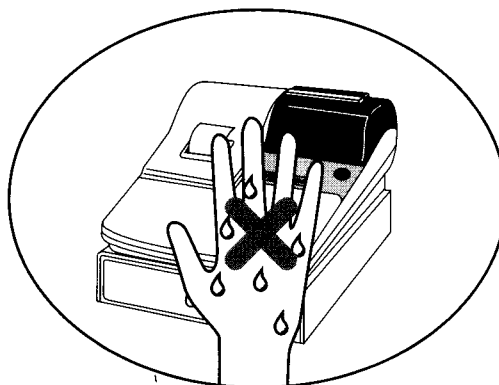

Use a soft, dry cloth to clean the exterior of the cash register. Never use benzene, or any other volatile agent.

 Never try to open the cash register or attempt your own repairs. Take the cash register to your authorized CASIO dealer for repairs.

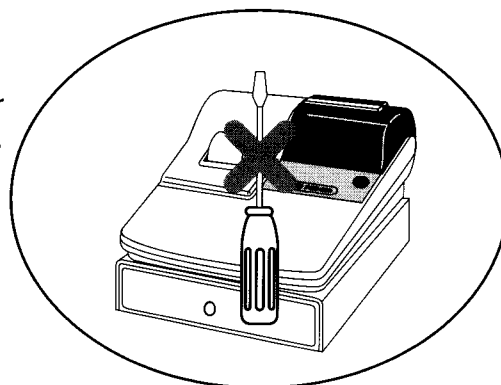

# Contents

 
<b>Introduction</b> .....	<b>2</b>
Unpacking the register .....	2
<b>Getting Started</b> .....	<b>6</b>
Remove the cash register from its box .....	6
Remove the tape holding parts of the cash register in place .....	6
Install the three memory backup batteries .....	6
Plug the cash register into a wall outlet .....	6
Insert the mode key marked "PGM" into the Mode Switch .....	6
Turn the mode key to the "REG" position .....	6
Install receipt/journal paper .....	6
To load 1-ply paper for printing of receipts .....	6
To load 1-ply paper for printing of journal .....	6
To load 2-ply paper for printing of receipts .....	6
Set the date .....	6
Set the time .....	6
Select printouts receipt or journal .....	6
Tax table programming .....	6
Programming automatic tax calculation .....	6
Programming tax calculations (without special rounding) .....	6
Programming tax calculations (with special rounding) .....	6
<b>Introducing 200CR</b> .....	<b>1</b>
General guide .....	1
Mode key .....	1
Displays .....	1
Drawer, Mode switch .....	1
Keyboard .....	1
<b>Basic Operations and Setups</b> .....	<b>2</b>
How to read the printouts .....	2
How to use your cash register .....	2
Displaying the time and date .....	2
Preparing coins for change .....	2
Preparing and using department keys .....	2
Registering department keys .....	2
Programming department keys .....	2
Registering department keys by programming data .....	2
Preparing and using PLUs .....	2
Programming PLUs .....	2
Registering PLUs .....	2
Preparing and using discounts .....	2
Programming discounts .....	2
Registering discounts .....	2

Preparing and using reductions .....	32
Programming for reductions .....	32
Registering reductions .....	33
Registering charge and check payments .....	34
Registering returned goods in the REG mode .....	35
Registering returned goods in the RF mode .....	36
Registering money received on account .....	37
Registering money paid out .....	37
Making corrections in a registration .....	38
No sale registration .....	40
Printing the daily sales RESET report .....	41
<b>Convenient Operations and Setups .....</b>	<b>42</b>
About the clerk control function .....	42
About post-finalization receipt .....	43
Programming general printing control .....	44
Programming READ/RESET report printing control .....	45
Programming compulsory, clerk control function and other features .....	46
Setting/editing the store telephone number .....	47
Setting a store/machine number .....	48
High digit limitation for departments .....	49
Single-item-sales for departments and PLUs .....	50
Registering discounts and premiums .....	53
Other programmable options .....	55
Calculator functions .....	56
Printing READ/RESET reports .....	58
Printing the cash register's program .....	64
<b>Troubleshooting .....</b>	<b>66</b>
When an error occurs .....	66
When the register does not operate at all .....	67
In case of power failure .....	68
When the L sign appears on the display .....	68
<b>User Maintenance and Options .....</b>	<b>69</b>
To replace the ink ribbon .....	69
To replace journal paper .....	70
To replace receipt paper .....	71
Options .....	71
<b>Specifications .....</b>	<b>72</b>
<b>Index .....</b>	<b>73</b>


# Getting Started

This section outlines how to unpack the cash register and get it ready to operate. You should read this part of the manual even if you have used a cash register before. The following is the basic set up procedure, along with page references where you should look for more details.

- 1. Remove the cash register from its box.**  
Make sure that all of the parts and accessories are included.

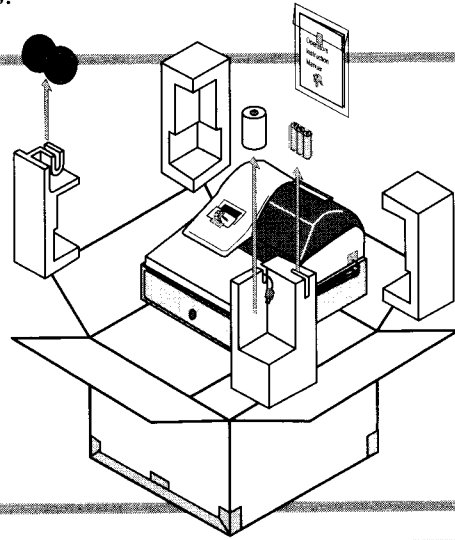




**2.**

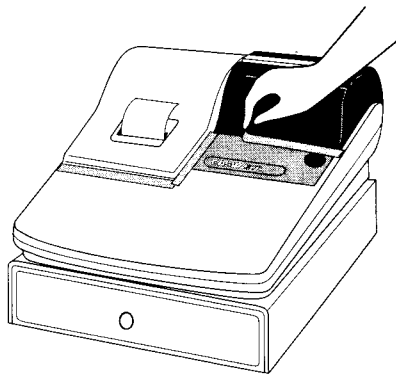 


- Remove the tape holding parts of the cash register in place.**  
Also remove the small plastic bag taped to the printer cover. Inside you will find the mode keys.

**3.**

   - Install the three memory backup batteries.**

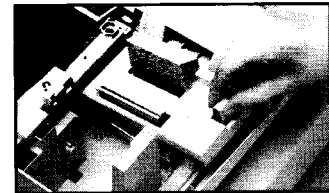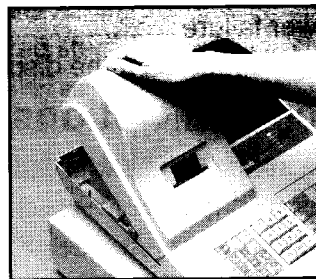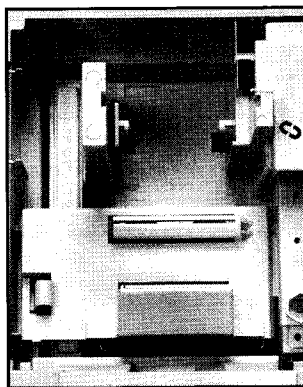

1. Remove the printer cover and inner cover.

2. Remove the battery compartment cover. Pressing down where the cover is marked "  " and put it up.