

 
ELECTRONIC CASH REGISTER

200CR

OPERATOR'S INSTRUCTION MANUAL



Unpacking the register

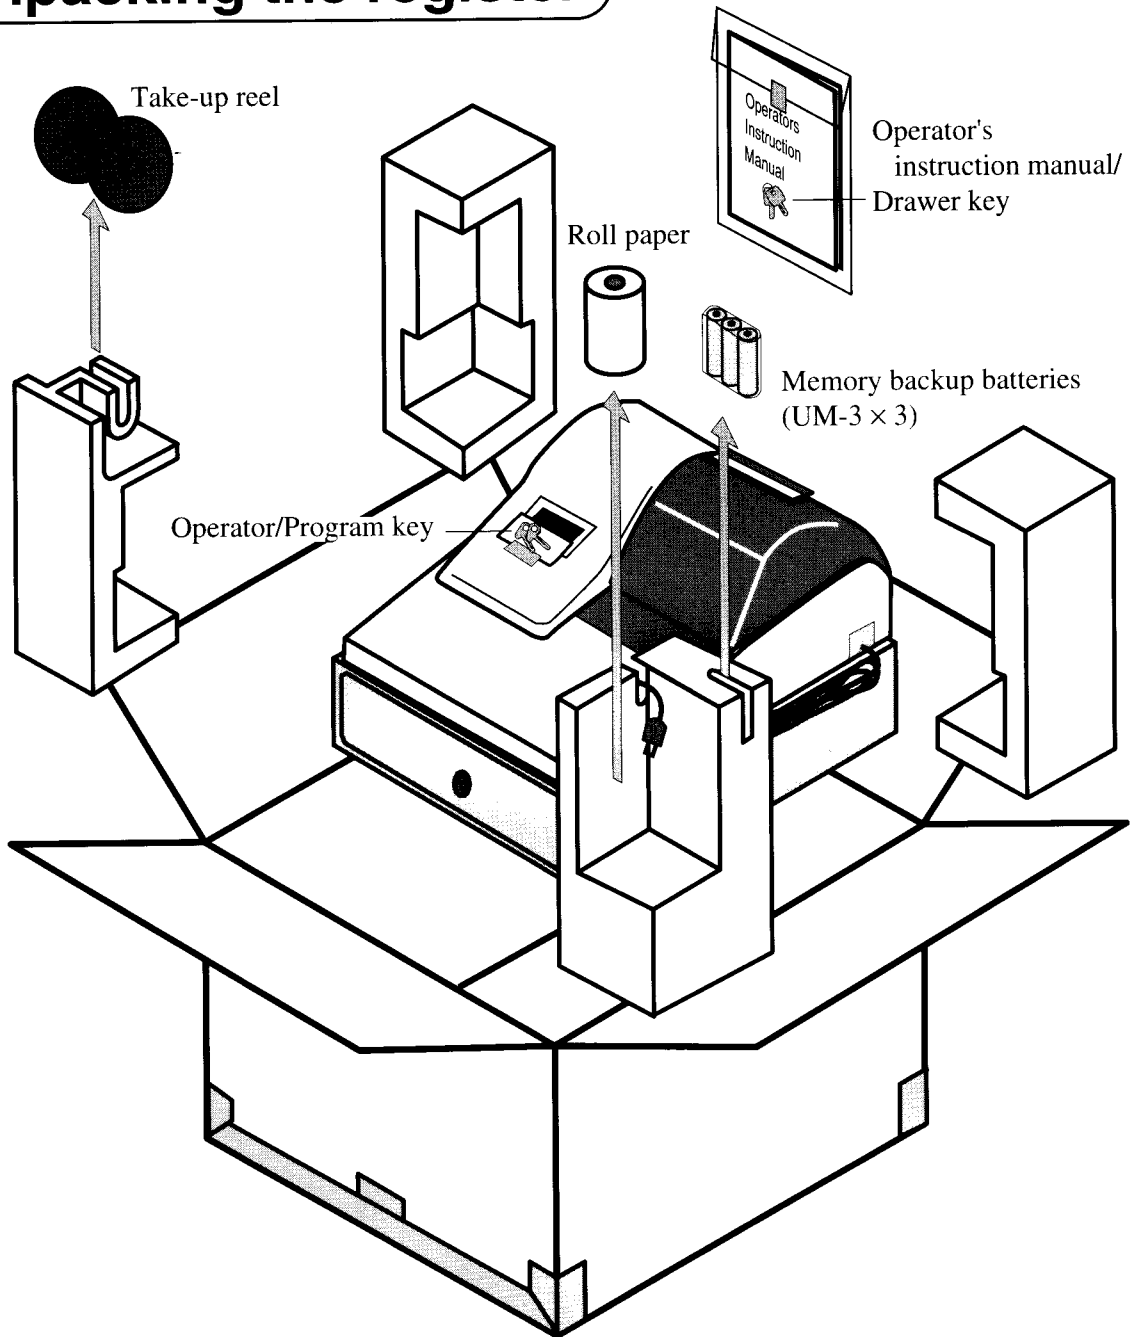

Welcome to the CASIO 200CR!

Congratulations upon your selection of a CASIO Electronic Cash Register, which is designed to provide years of reliable operation.

Operation of a CASIO cash register is simple enough to be mastered without special training. Everything you need to know is included in this manual, so keep it on hand for reference.

 
 
Consult your CASIO dealer if you have any questions about points not specifically covered in this manual.

The main plug on this equipment must be used to disconnect mains power.
Please ensure that the socket outlet is installed near the equipment and shall be easily accessible.

Important!



Before you do anything, be sure to note the following important precautions!

Do not locate the cash register where it will be subjected to direct sunlight, high humidity, splashing with water or other liquids, or high temperature (such as near a heater).

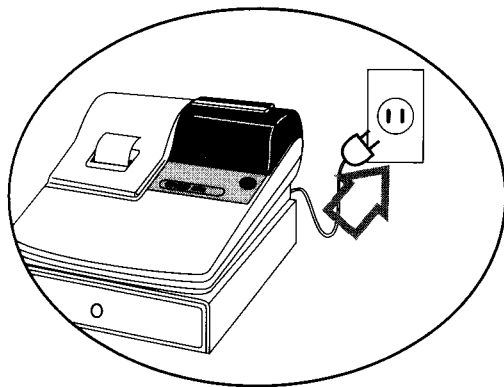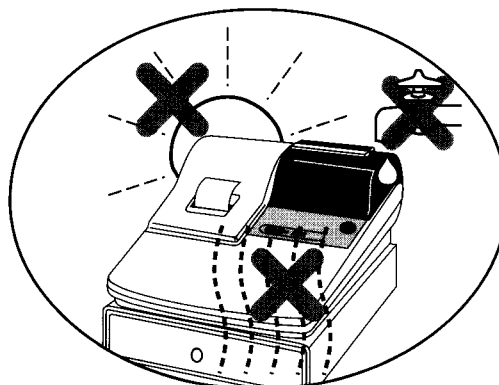


Be sure to check the sticker on the side of the cash register to make sure that its voltage matches that of the power supply in the area.

  Never operate the cash register while your hands are wet.

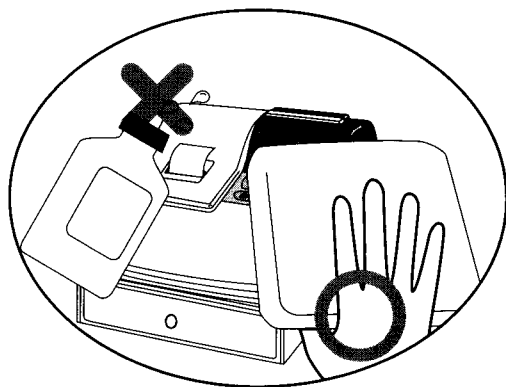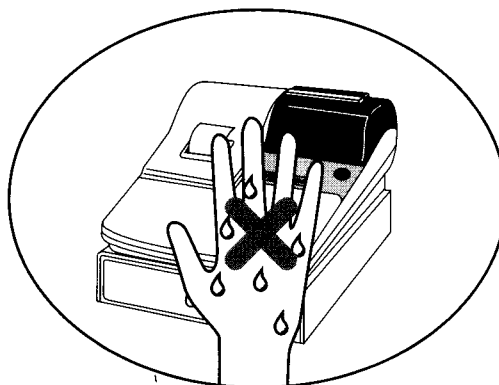

Use a soft, dry cloth to clean the exterior of the cash register. Never use benzene, or any other volatile agent.

 Never try to open the cash register or attempt your own repairs. Take the cash register to your authorized CASIO dealer for repairs.

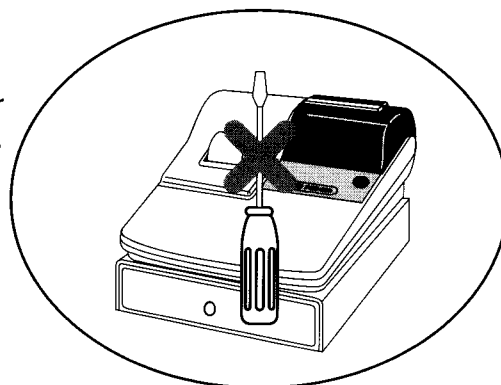

Contents


Introduction	2
Unpacking the register	2
Getting Started	6
Remove the cash register from its box	6
Remove the tape holding parts of the cash register in place	6
Install the three memory backup batteries	6
Plug the cash register into a wall outlet	6
Insert the mode key marked "PGM" into the Mode Switch	6
Turn the mode key to the "REG" position	6
Install receipt/journal paper	6
To load 1-ply paper for printing of receipts	6
To load 1-ply paper for printing of journal	6
To load 2-ply paper for printing of receipts	6
Set the date	6
Set the time	6
Select printouts receipt or journal	6
Tax table programming	6
Programming automatic tax calculation	6
Programming tax calculations (without special rounding)	6
Programming tax calculations (with special rounding)	6
Introducing 200CR	1
General guide	1
Mode key	1
Displays	1
Drawer, Mode switch	1
Keyboard	1
Basic Operations and Setups	2
How to read the printouts	2
How to use your cash register	2
Displaying the time and date	2
Preparing coins for change	2
Preparing and using department keys	2
Registering department keys	2
Programming department keys	2
Registering department keys by programming data	2
Preparing and using PLUs	2
Programming PLUs	2
Registering PLUs	2
Preparing and using discounts	2
Programming discounts	2
Registering discounts	2

Preparing and using reductions	32
Programming for reductions	32
Registering reductions	33
Registering charge and check payments	34
Registering returned goods in the REG mode	35
Registering returned goods in the RF mode	36
Registering money received on account	37
Registering money paid out	37
Making corrections in a registration	38
No sale registration	40
Printing the daily sales RESET report	41
Convenient Operations and Setups	42
About the clerk control function	42
About post-finalization receipt	43
Programming general printing control	44
Programming READ/RESET report printing control	45
Programming compulsory, clerk control function and other features	46
Setting/editing the store telephone number	47
Setting a store/machine number	48
High digit limitation for departments	49
Single-item-sales for departments and PLUs	50
Registering discounts and premiums	53
Other programmable options	55
Calculator functions	56
Printing READ/RESET reports	58
Printing the cash register's program	64
Troubleshooting	66
When an error occurs	66
When the register does not operate at all	67
In case of power failure	68
When the L sign appears on the display	68
User Maintenance and Options	69
To replace the ink ribbon	69
To replace journal paper	70
To replace receipt paper	71
Options	71
Specifications	72
Index	73


Getting Started

This section outlines how to unpack the cash register and get it ready to operate. You should read this part of the manual even if you have used a cash register before. The following is the basic set up procedure, along with page references where you should look for more details.

 - 1. Remove the cash register from its box.**
Make sure that all of the parts and accessories are included.

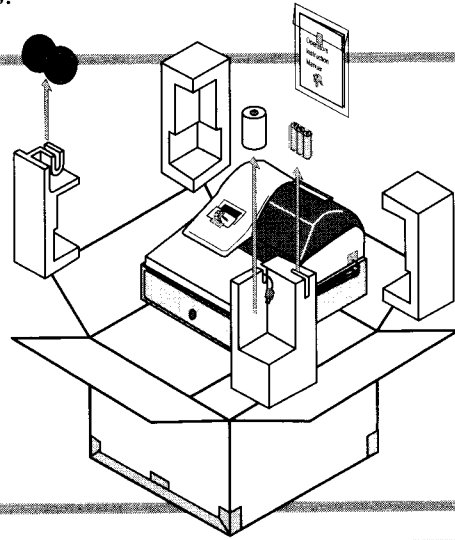



 
2.

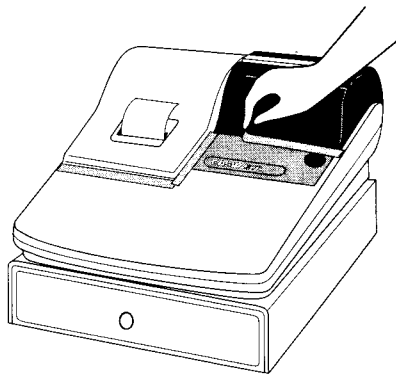


- Remove the tape holding parts of the cash register in place.**
Also remove the small plastic bag taped to the printer cover. Inside you will find the mode keys.

3.

   - Install the three memory backup batteries.**

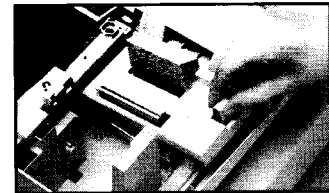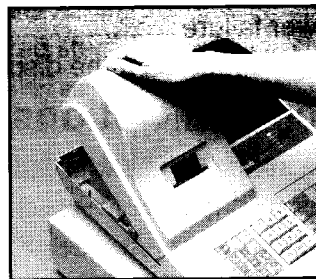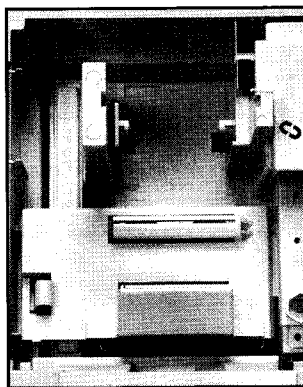

1. Remove the printer cover and inner cover.

2. Remove the battery compartment cover. Pressing down where the cover is marked "  " and put it up.