CASIO CE4700

OPERATION MANUAL

A. INDEX

- 1. Adding / Changing Prices
- 2. Adding / Changing Department Descriptions
- 3. Group Link List
- 4. Adding / Changing Group Descriptions
- 5. Linking Groups to Departments
- 6. Programming Time and Date
- 7. Adding / Changing clerk names
- 8. Alpha Code Characters
- 9. Reports
- 10. Error modes

1. Adding / Changing Prices

- 1. TURN Turn key to the PROGRAM position
- 2. DISPLAY Should show PGM1
- 3. *ENTER* New price (without using decimal point)
- 4. PRESS Preset item button that you wish to change
- 5. REPEAT Steps 3 to 4 until finished
- 6. PRESS Subtotal button to finish
- 7. TURN Key back to REG1

2. Adding/Changing Department Descriptions

1.	TURN	Turn key to the PROGRAM position
2.	ENTER	2
3.	PRESS	Subtotal key
4.	ENTER	New description using 4 digit codes (putting decimal point between each set of numbers) up to 12 characters
5.	PRESS	00 key
6.	PRESS	Physical key on keyboard to be changed
7.	REPEAT	Steps 4 to 6 until all changes have been made
8.	PRESS	Subtotal key to finish
9.	TURN	Key back to REG1

3. Group Link List

This job will print a report showing the current available Group Links.

1. TURN Turn key to the PROGRAM position

2. *ENTER* 6

3. PRESS Subtotal

4. *ENTER* 206 (for group printout)

5. PRESS Subtotal key

6. TURN Key back to REG1

4. Adding/Changing Group Descriptions

This job will set up Group Names.

1. TURN Turn key to the PROGRAM position

2. *ENTER* 2

3. PRESS Subtotal

4. *ENTER* 0106

01 = That is the 1st Group

06 = Group

5. *PRESS* Subtotal key

6. ENTER Group description eg Haircuts using 4

digit codes from the back page, putting a

decimal point between each code

7. PRESS 00 key

8. REPEAT Steps 4 to 7 until all group names entered

9. PRESS Subtotal key

10. TURN Key back to REG1

5. Linking Groups to Department

This job will link Departments to Groups

1. TURN Turn key to the PROGRAM position

2. *ENTER* 3

3. PRESS Subtotal

4. *ENTER* 1166

5. PRESS Subtotal key

6. *ENTER* the Group code XX

(ie to set as linking to group 8, enter the

following code 0008)

7. PRESS The department key to be linked

8. PRESS CASH key

9. REPEAT Steps 6 to 8 until all entered

10. PRESS Subtotal

11. TURN Key back to REG1

<u>6.</u>	Date	and	Time	Programming
1.	TURN	Turn key to	the PROGR	RAM position
2.	DISPLAY	Should sho	w PGM1	
3.	ENTER	Date in the following format:- (for days 1 to 9, be sure to enter them as 01 to 09. Enter months 1 to 9 as 01 to 09)		
		YYMMDD		
		YY = Year MM = Mont DD = Day	h	
4.	PRESS	X / Date Tin	ne button	
5.	PRESS	Clear key		
6.	ENTER	Time in the	following fo	rmat:-
		•		re to enter them as 1 to 9 as 01 to 09)
		HHMM		
		HH = Hour MM = Minu	te	
7.	PRESS	X / Time Da	ate button	
8.	TURN	Key back to	REG1	

7. Add / Change Clerk Name

1. **TURN** Turn key to the PROGRAM position 2. **ENTER** 2 3. **PRESS** Subtotal button 4. DISPLAY Should show PGM2 5. **ENTER** XX07 Where XX stands for the memory number of each clerk. Simple clerk buttons use the same memory number as on the clerk button. 6. **PRESS** Subtotal button New description using codes, remember to enter 7. **TYPE** decimal point between each code 8. **PRESS** 00 button 9. **PRESS** CASH (or TOTAL) button **PRESS** Subtotal button to finish 10. 11. **TURN** Key back to REG1 12. **EXAMPLE** To program CLK 1 Turn key to Program and enter 2 Subtotal Enter clerk number to be changed ie 01 Followed by 07, (0107) press subtotal key Enter 0112 . 0205 . 0204 . 0000 . 0101 . Press 00 key then CASH key Press subtotal to finish and turn key back to REG

8. Alpha Character Codes

0110 0111 0112 0113 0114 0115 0200 0201 0202 0203	ABCDEFGHIJ	0207 0100 0208 0209 0210 0211 0212 0213 0214 0215	N O P Q R S T U V W
0204	K	0300	X
0205	L	0301	Y
0206	M	0302	Z
0615	\$	0104	4
0004	&	0105	5
0100	0	0106	6
0101	1	0107	7
0102	2	0108	8
0103	3	0109	9
0000	Space		

9. Reports

Daily READ

1. *TURN* Key to the X1 position

2. PRESS Cash key

Daily READ & RESET

1. TURN Key to the Z1 position

2. PRESS Cash key

Monthly READ & RESET

1. *TURN* Key to the X2/Z2 position

2. PRESS 1

3. PRESS Cash key

<u>10.</u>		Error	modes
E03	START	Machine has initialised – contact Cash Register Doctor	t The
E04	MODE	Mode switch changed during tra To clear - turn key round to a power where it no longer beeping and subtotal	osition
E06	CLRK	Clerk button has changed during Transaction. To clear press each Button until beeping stops.	•
E07	RCPT	Receipt on/off switch has been during transaction. To clear back to other position	•